


# LUXE LINER INSTRUCTIONS FOR HYBRID TRAILERS

Thank You for purchasing Luxe Liners

Please read through all directions before you begin installation.

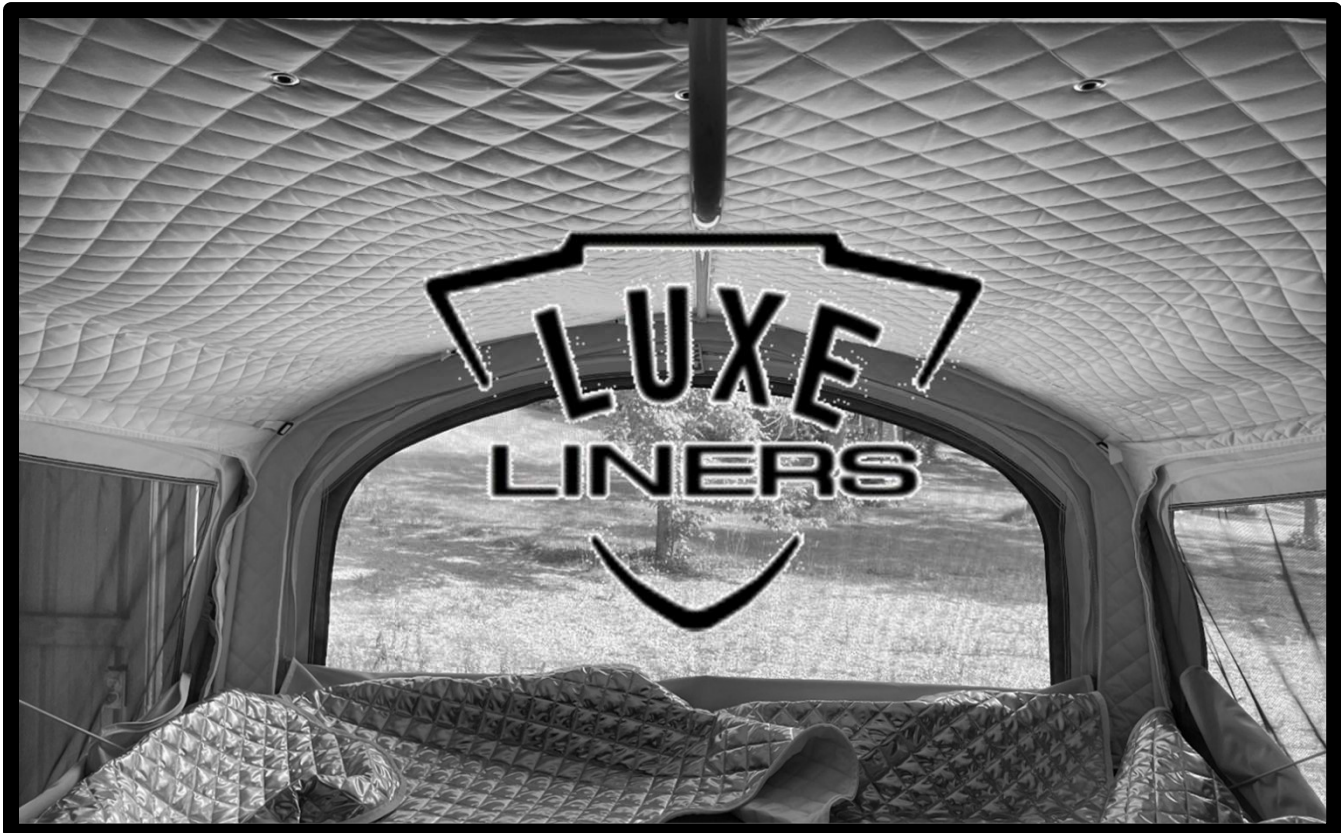

## Material needed for installation:

### Included:

1 x Luxe Liner

### Install Kit:

20 x Screw-in Snap Sockets

1 x 1/8th inch drill bit

### Other Items Needed:

Tape Measure

Power Drill



SCAN QR Code for install video

## LUXE LINER INSTRUCTIONS FOR HYBRID TRAILERS

### Install Bunk Liner






Set up your Bunk end as normal

Step 1: Lay the bunk liner on your bed.

Step 2: Pull the liner over the Shepherd hook, align the center mark.

Step 3: Work the back window material around the bed bow.

Step 4: Connect and adjust the straps around the bed bow to line up the rear window.

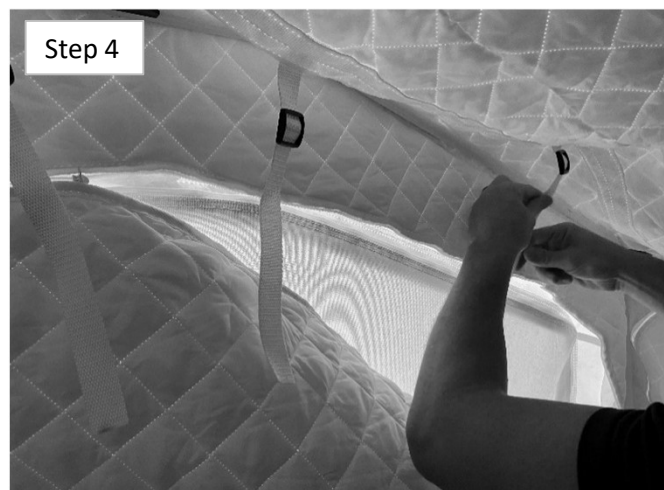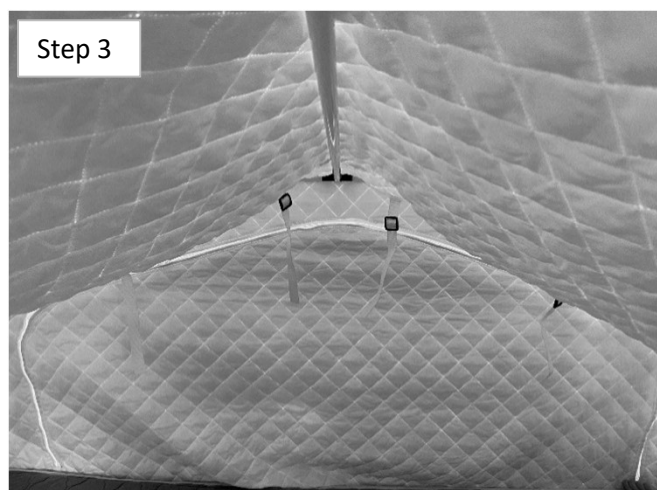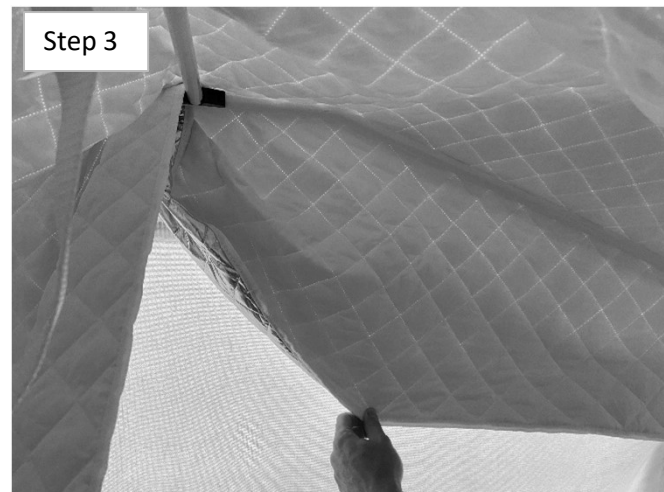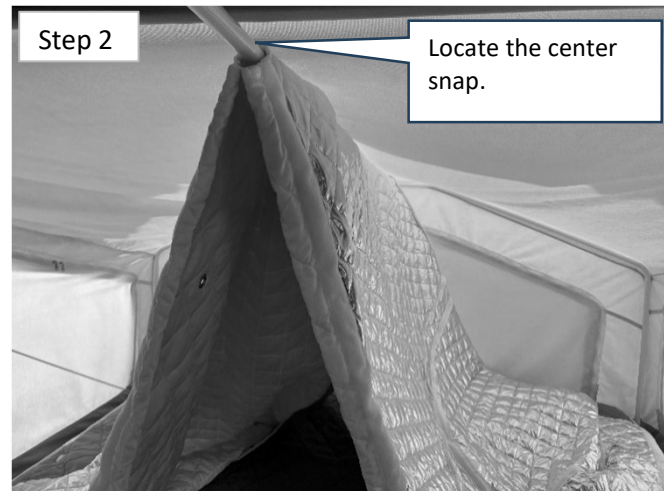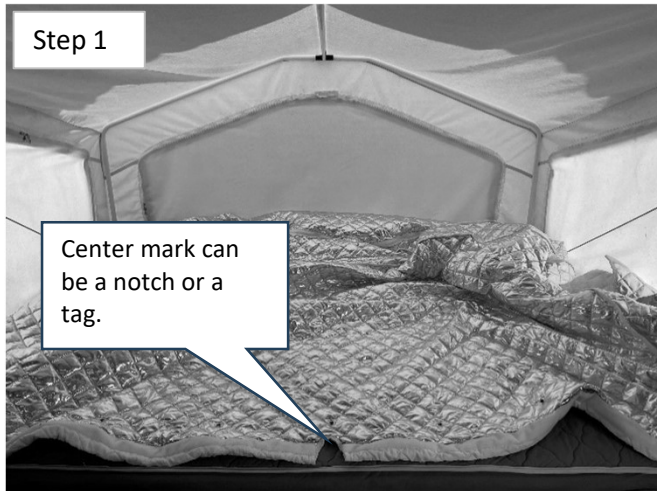


## LUXE LINER INSTRUCTIONS FOR HYBRID TRAILERS

### Install Center Snap:

Use a tape measure to find the center of your bunk. DO NOT USE the pole as a guide, they are not always installed in the center. Mark the location.

Pre-drill a 1/8th inch hole using the provided drill bit.


**NOTE:** Occasionally there may be a factory installed snap or screw in the center. Install your center screw as close to the center as possible.

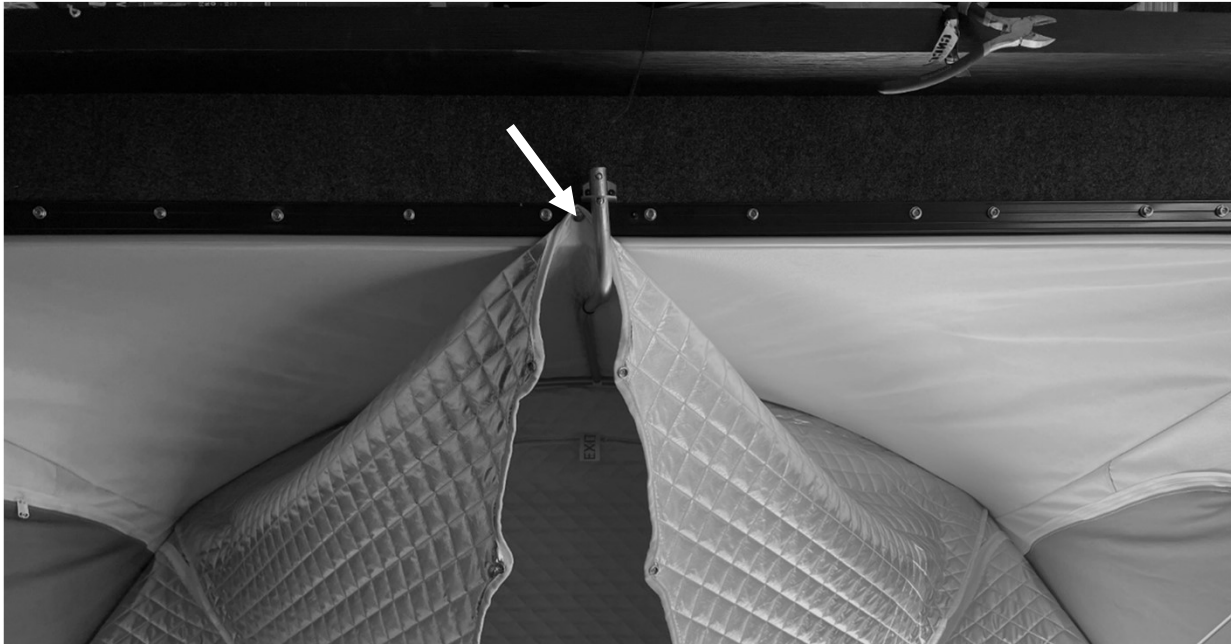

### Install Remaining Snaps:

Working from the center, pull the material snug up to the next snap of your liner and mark this location. Drill a pilot hole and install that snap. Continue to install snaps 1 left side, then 1 right side until all snaps are installed. Install snaps 1 at a time, it is **not** recommended to predrill multiple holes before installing snaps as this can result in a loose fitting liner.

**NOTE:** While we made every effort to avoid interference between your new snaps and original hardware, factory hardware locations vary and may have to be relocated or you can install your new snaps as close as possible.

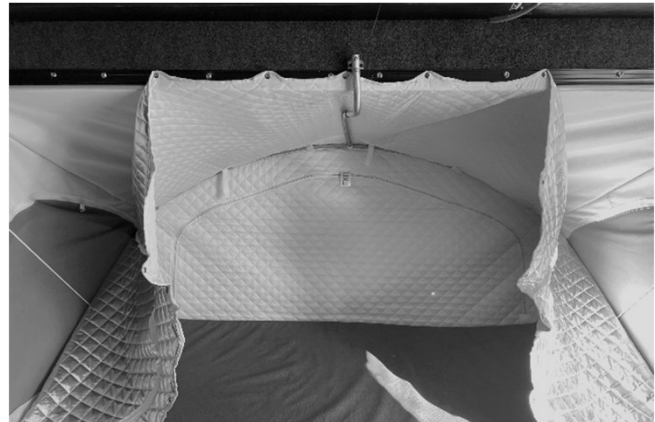


## LUXE LINER INSTRUCTIONS FOR HYBRID TRAILERS



### Adjust Liner

Adjust the back panel so it is centered.

Adjust straps at bed bow to remove sag and align the rear window.

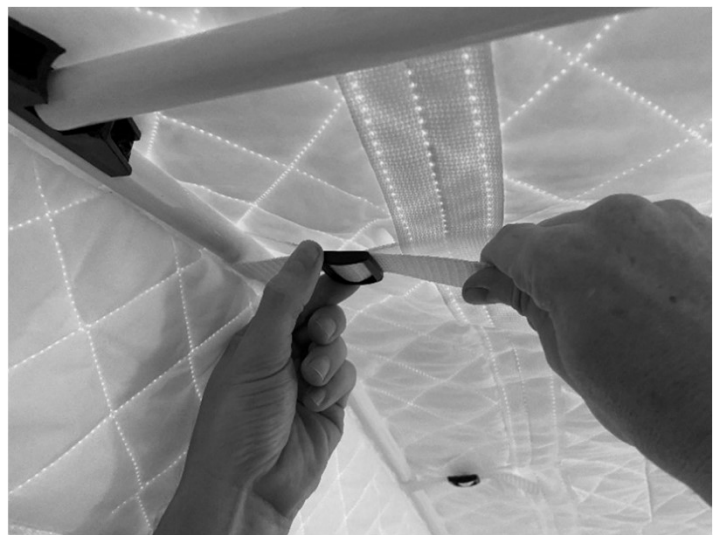

## LUXE LINER INSTRUCTIONS FOR HYBRID TRAILERS

### Reinstal Mattress and Tent Protector:



### Packing Up:

You can leave your Luxe Liners installed when packing up. Remove your shepard hook as normal. You will need to pull the bunk liner on top of the bed bow as shown below. Make sure bed bow rests flush on the mattress or bunk door depending on your model. Note: We recommend you **DO NOT** store your camper for long periods of time with your Luxe liners installed. Protect your investment- remove your liners and store them in a cool dry place when camper is unused for extended periods.



## LUXE LINER INSTRUCTIONS FOR HYBRID TRAILERS

### Care instructions:

Your bunk liners are completely machine washable. Use a large front loading washer on gentle cold. Use mild detergent like Downy. Dry on lowest heat setting.

### Note on Condensation and moisture:

Luxe Liners will significantly reduce condensation in your bunk ends. However, in extreme conditions, a small amount of moisture can accumulate between the liner and the canvas. This is normal, the moisture will dissipate naturally during the day with normal activity, and opening your tent windows will help.

Before storing your trailer, check to make sure there is no moisture.

Always use good condensation management techniques. Run exhaust fans when cooking or showering.

Run Exhaust and vent fans in humid conditions. Run your air conditioning fan to increase air circulation.

