

# LUXE LINER INSTRUCTIONS FOR POP UP TRAILERS

Thank You for purchasing Luxe Liners

Please read through all directions before you begin installation.



## Material needed for installation:

### Included:

1 x Luxe Liner  
Instructions  
Velcro mounting Strip  
#8 x 1/2in. Screws  
7/64th drill bit  
Spring Clamps

### Other Items Needed:

Power Drill  
Scissors



SCAN QR Code for install video

## LUXE LINER INSTRUCTIONS FOR POP UP TRAILERS

### Install Bunk Liner





Set up your Bunk end as normal

Step 1: Lay the bunk liner on your bed.

Step 2: Pull the liner over the Shepherd hook, align the center mark as shown.

Step 3: Work the back window material around the bed bow.

Step 4: Connect and adjust the straps around the bed bow. Adjust straps so the rear window zipper of the liner and canvas line up.

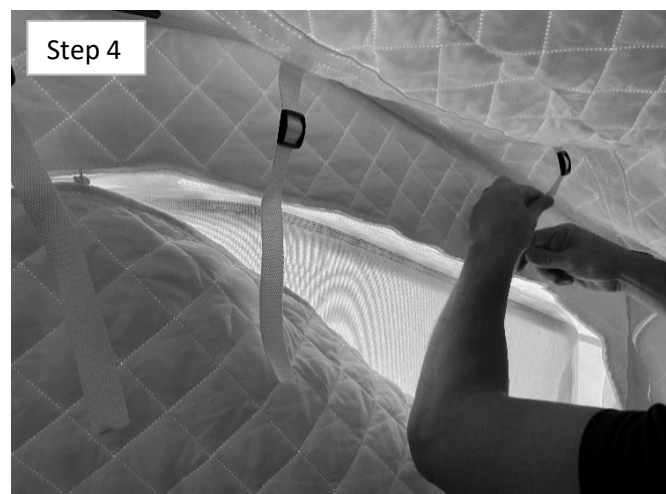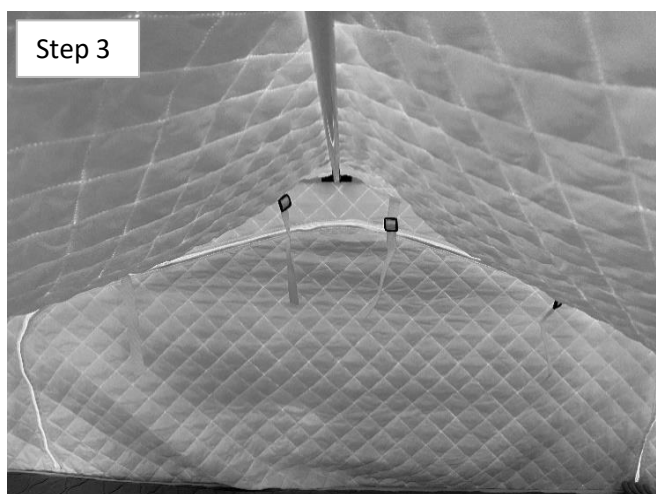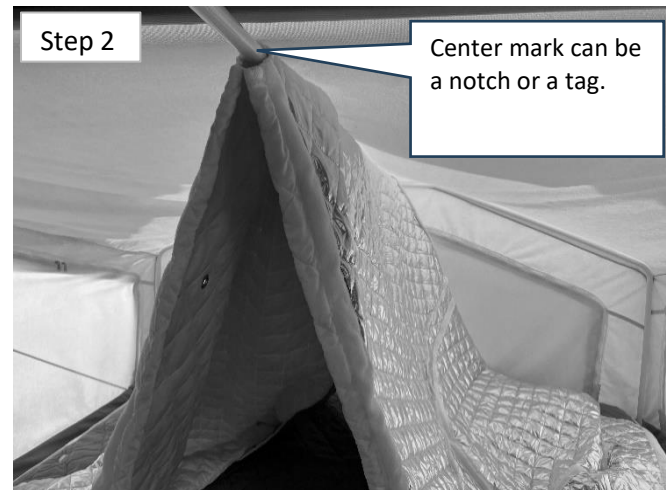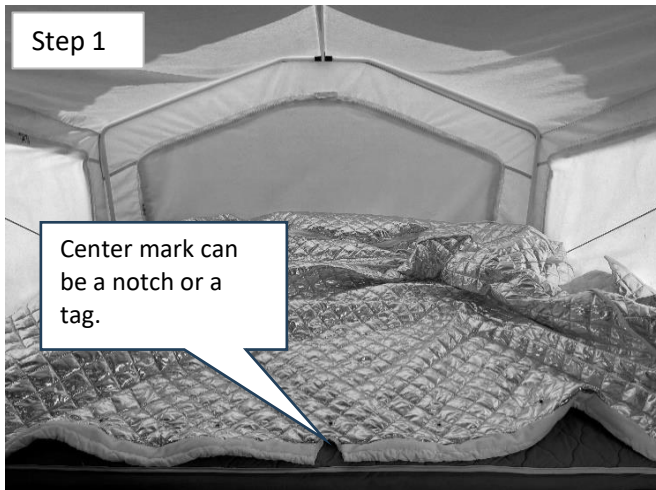

## LUXE LINER INSTRUCTIONS FOR POP UP TRAILERS



### Install Velcro

You will need to install Velcro above your bunk, use the provided Velcro strip and screws.



### Determine Screw Locations

Locate your curtain rail, Install the provided velcro below the curtain rail making sure Velcro does not interfere with curtain function. Some trailers will already have screws in this location you will need to add addition screws. Coleman/Fleetwood/Somerset have a rubber gasket you can screw into.

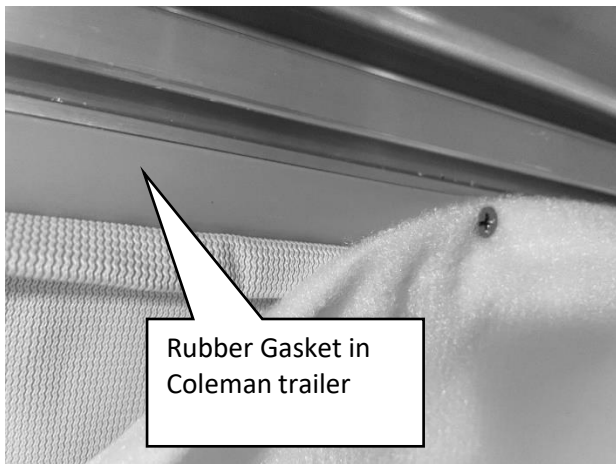
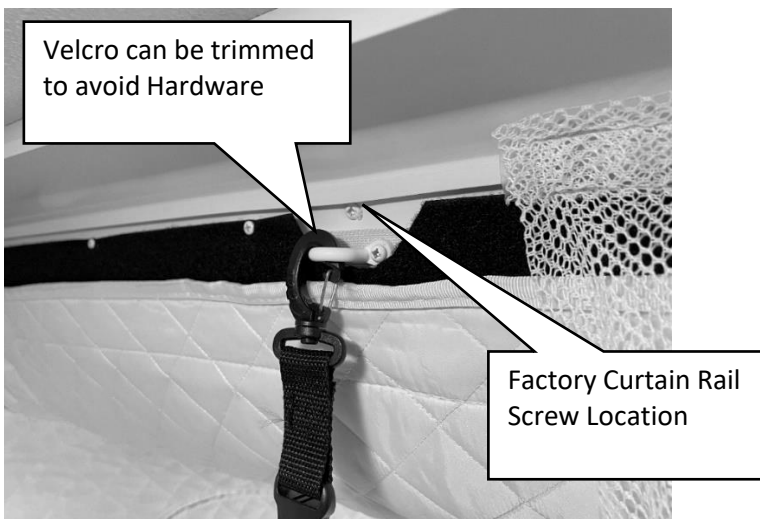




## LUXE LINER INSTRUCTIONS FOR POP UP TRAILERS

### Screw in Velcro

Use the provided 7/64th drill bit to drill pilot holes for your mounting screws. Screws should be placed on both ends and spaced every 6 to 8 inches. Screw the provided Velcro in place hem side up with screws going through the hemmed portion. Loop Side Velcro should be facing out.

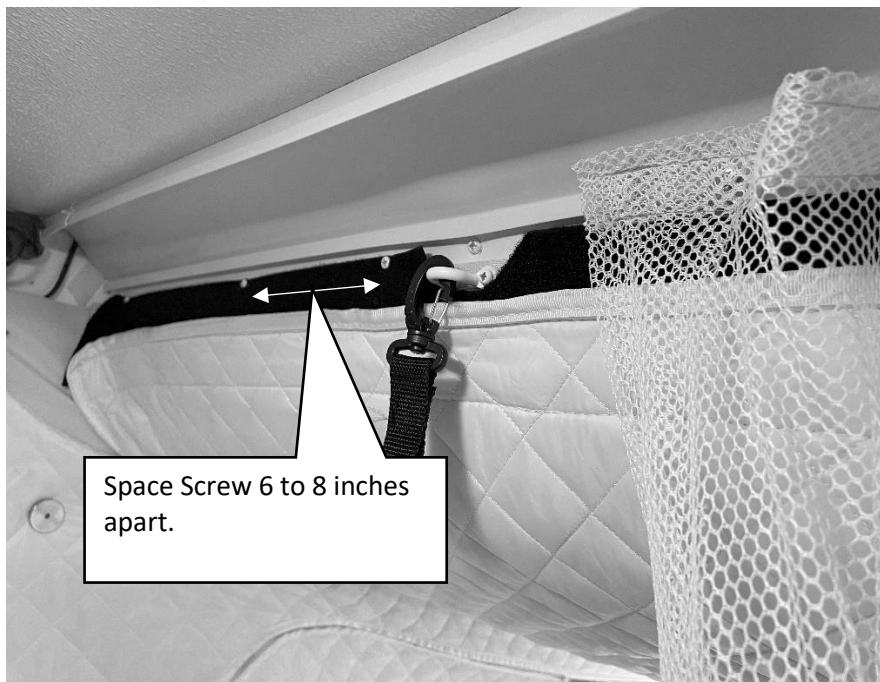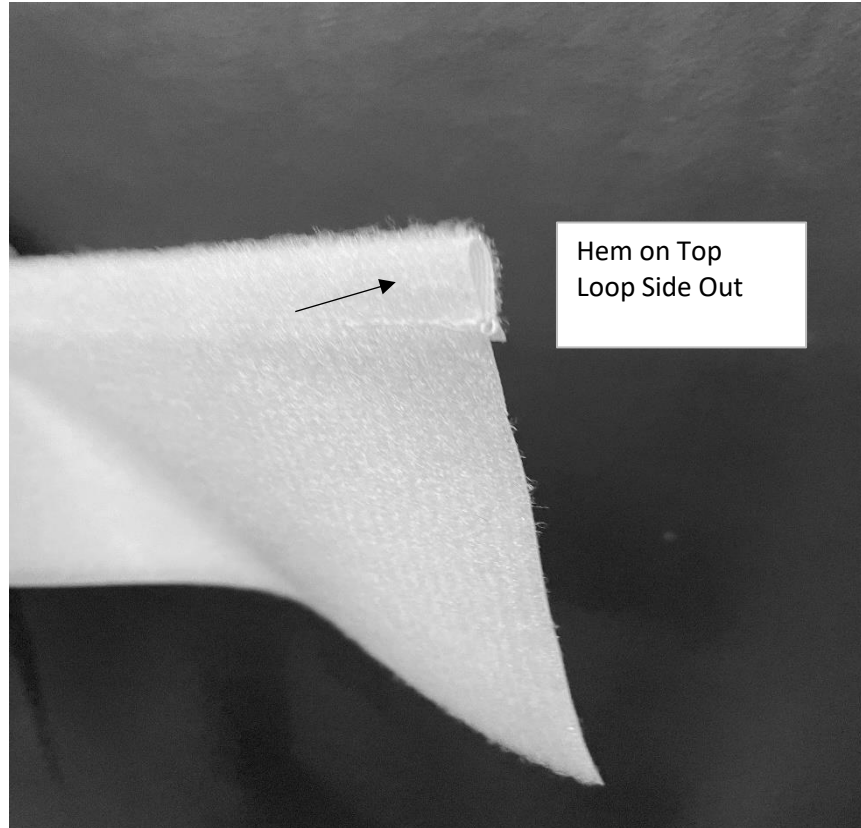

## LUXE LINER INSTRUCTIONS FOR POP UP TRAILERS




### Attach Liner

Step 1. Attach the top section first, start from the center and work your way out to the ends.

Step 2. Use the provided clamps to secure the sides to an adjacent curtain or trim, or if you are using our insulated curtain panels your Liner will Velcro to our insulated curtain panel

Step 3. Adjust the back panel so it is centered.

Step 4. Adjust straps at bed bow to remove sag and align the rear window.

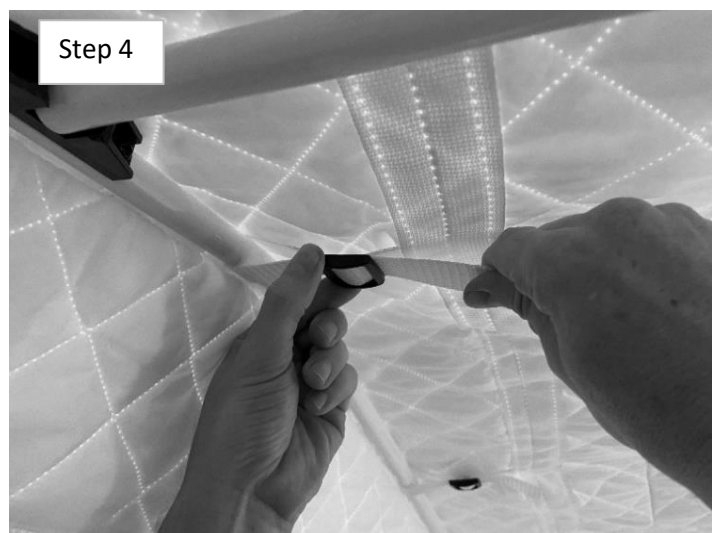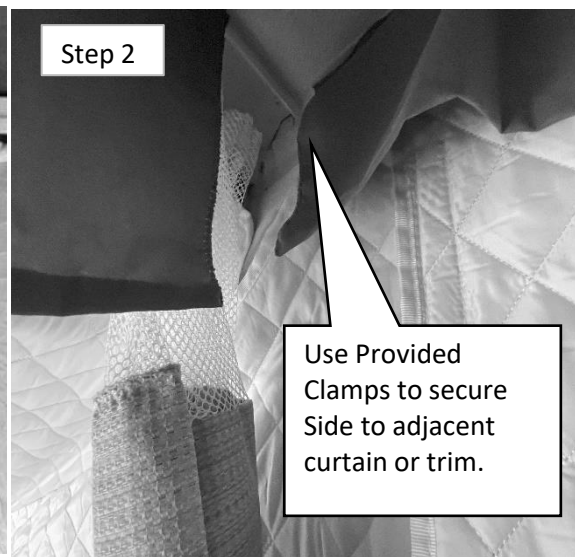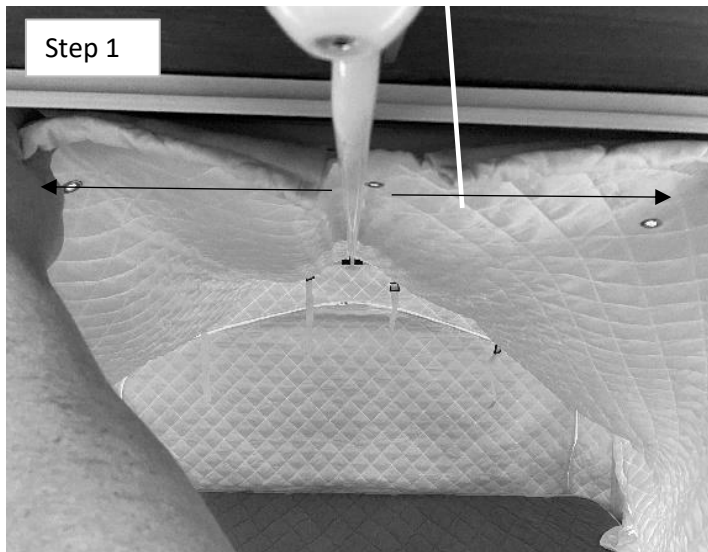

## LUXE LINER INSTRUCTIONS FOR POP UP TRAILERS

### Packing Up:

For many trailers you can leave your Luxe Liners partially installed when packing up. You will need to un-Velcro the Liner from your trailer and rest it on your bed to keep the material from bunching up and preventing you from latching your trailer lid. **Note:** We recommend you **DO NOT** store your camper for long periods of time with your Luxe Liners installed. Protect your investment- remove your Liners and store them in a cool dry place when camper is unused for extended periods.



### DO:

Disconnect  
Velcro and lay  
liners flat on bed.



### DO NOT:

Leave Velcro  
attached.



## LUXE LINER INSTRUCTIONS FOR POP UP TRAILERS

**Care instructions:**

Your bunk liners are completely machine washable. Use a large front loading washer on gentle cold. Use mild detergent like Downy. Dry on lowest heat setting.

**Note on Condensation and moisture:**

Luxe Liners will significantly reduce condensation in your bunk ends. However, in extreme conditions, a small amount of moisture can accumulate between the liner and the canvas. This is normal, the moisture will dissipate naturally during the day with normal activity, and opening your tent windows will help.

Before storing your trailer, check to make sure there is no moisture.

Always use good condensation management techniques. Run exhaust fans when cooking or showering.

Run Exhaust and vent fans in humid conditions. Run your air conditioning fan to increase air circulation.

